

Instructions: Quick Connect Canopies


Models :QMP-1RN-TR&QMP-1SQ-TR

CAUTION:

Always turn off power at fuse box prior to installation to prevent electrical shock. For installation by a qualified electrician.

Overview:

QMP Canopies are designed to fit all WA fixtures and pendants (50 watts max). They are compatible with other manufacturers' brand of quick connect fittings. This canopy mounts to a junction box, or directly to a surface (use a box where required by code). Power is supplied by a 12 or 24-volt transformer (sold separately).

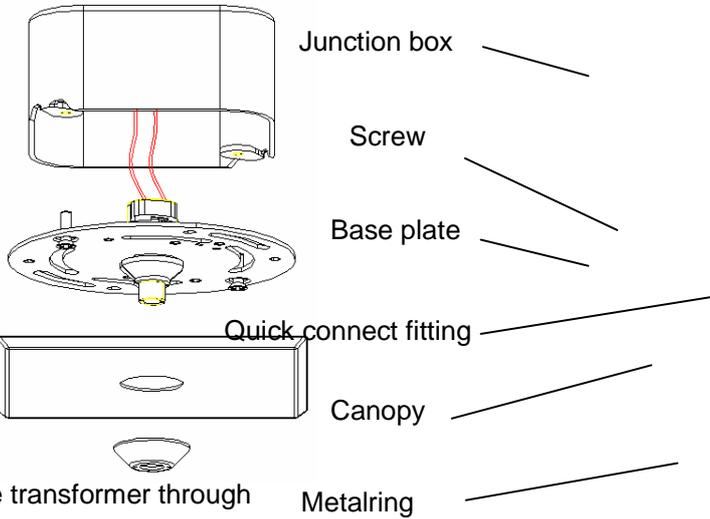


Installation:

1. Consult voltage drop guidelines below for distance and wire gauge sizes.
2. Remove the metal ring and separate the base plate.
3. Guide the secondary wires from the transformer through the knock out in the junction box.
4. Connect fixture wires to transformer secondary wires, using wire nuts (supplied).

Note: Do not connect to 120 volt if the junction box is fed from a remote transformer.

5. Attach the base plate to the junction box screws (supplied).
6. If attaching to a flat surface, drill a hole to allow clearance for wire assembly. Mark the position for screws, drill 3/16" holes. Use wood screws to affix base plate to surface through available holes or slots.
7. Mount the canopy to the surface, attaching a ring to the quick connect fitting.
8. Install Quick Connect fixture or pendant with quick connect post into fitting and tighten until snug.

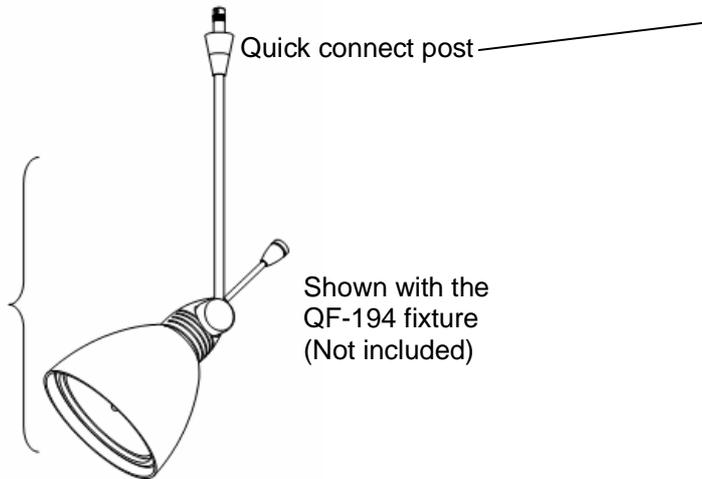

Retain instructions for future reference.

VOLTAGE DROP GUIDELINE/ Transformer to canopy distance		
WIRE SIZE	35 W	50 W
18 GAUGE	8 FT	8 FT
16 GAUGE	12 FT	12 FT
14 GAUGE	16 FT	16 FT
12 GAUGE	20 FT	20 FT
Data based on 5% voltage drop		