

## INSTALLATION INSTRUCTION

### Quick Connect™ Canopy 6 Point Mirrored Round - QMP-G6RN

WAC LIGHTING

Responsible Lighting®

#### SAFETY INSTRUCTION


- Always turn off power at fuse box prior to installation to prevent electrical shock.
- For installation by a qualified electrician.
- Line voltage wire must be 12AWG BX or Romex wire.
- Install over a standard 4 inch junction box.
- All wires must be contained in the junction box.

#### OVERVIEW

Canopies are designed to fit all WAC quick connect fixtures. They may also be used on other manufacturers brand of quick connect (consult factory for compatibility). Uses three fixtures or pendants, 50 watt max each. Canopies come with self-contained electronic transformers that can generally be used with low voltage electronic dimmer switches.

1. Loosen the canopy screws and separate the canopy from the base plate.
2. Remove a knock out from the base plate.
3. Support canopy and guide the black and white wires and from the transformer through the knock out in the base plate and into the Junction box.
4. Connect ground wire from junction box to the green grounding wire from the base plate.
5. Connect corresponding line volt wires from the junction box to transformer wires, with wire nuts (supplied). Tuck excess wire into the junction box.
6. Attach the base plate to the junction box using the slotted holes.
7. Raise the canopy to the base plate, and tighten the three screws loosened earlier.

Retain instructions for future reference.

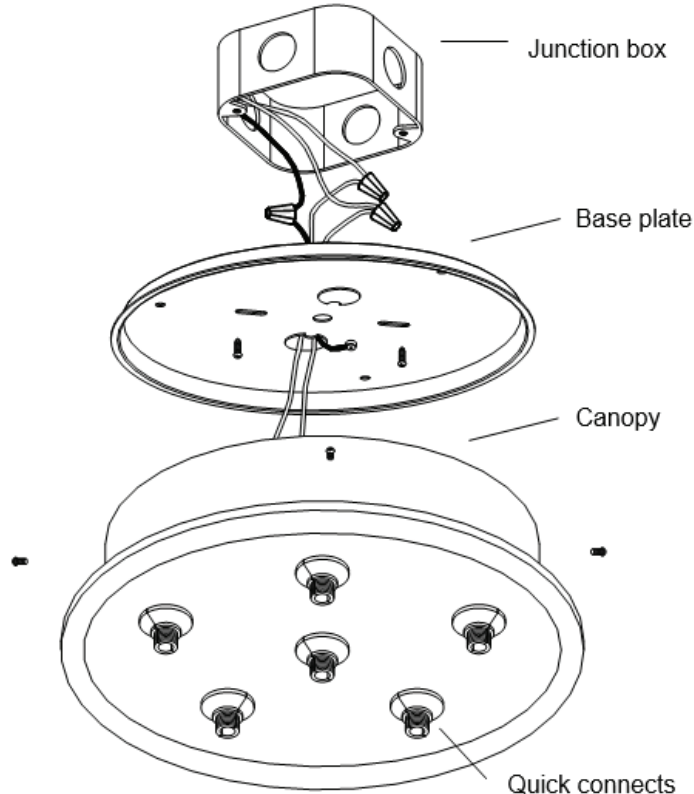

WAC Lighting  
www.waclighting.com  
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center  
44 Harbor Park Drive • Port Washington, NY 11050  
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center  
1750 Archibald Ave • Ontario, CA 91761  
Phone (800) 526.2588 • Fax (800) 526.2585